

UPster H 500 M2

Hood type dishwashing machine

Original operating instructions



EN

For the types in the series: M004DWHT10M2-20



Read operating instructions before using the machine!

Contents

1	NOTES ON THE OPERATING INSTRUCTIONS	4
1.1	Product identification	4
1.2	Delivery contents	4
1.3	Related documents	4
2	LIABILITY AND WARRANTY.....	5
3	SAFETY	6
3.1	Symbol explanation	6
3.1.1	<i>Notes in the instructions</i>	6
3.1.2	<i>Safety symbols in the instructions</i>	7
3.2	Requirements for the personnel	8
3.3	Residual risks	9
3.4	Intended use	10
3.5	Foreseeable misuse	10
3.6	Fundamental safety and accident prevention regulations	11
3.7	What to do in the event of an emergency	13
4	PRODUCT DESCRIPTION	13
4.1	Functional description	13
4.2	Overview illustration	14
4.3	Type label	15
4.4	GiO MODULE	15
4.5	Blue operating concept	15
4.6	Detergent and rinse aid	16
4.6.1	<i>Detergent</i>	16
4.6.2	<i>Rinse aid</i>	16
4.6.3	<i>Dosing equipment</i>	16
4.6.4	<i>Suction lances</i>	17
4.6.5	<i>Change of products</i>	17
4.7	Installation of ActiveClean water softener (optional equipment)	17
4.8	AirConcept exhaust heat recovery (optional equipment)	18
4.8.1	<i>Disinfection control</i>	18
5	TECHNICAL DATA.....	19
5.1	EC/EU declaration of conformity	20
6	ASSEMBLY	20
6.1	Prerequisites for assembly	20
6.1.1	<i>Checking the condition at delivery</i>	20
6.1.2	<i>Requirements for the installation area</i>	20
6.1.3	<i>Requirements for the waste water connection</i>	21
6.1.4	<i>Requirements for the fresh water connection</i>	21
6.1.5	<i>Requirements to the electrical connection</i>	22
6.2	Transport	23
6.3	Perform assembly	24
7	COMMISSIONING	25
7.1	Check prerequisites for commissioning	25
7.2	Perform commissioning	25

8	OPERATION/USE.....	26
8.1	Membrane key pad	26
8.2	Prepare dishwasher	27
	8.2.1 <i>Putting the machine into operation</i>	27
8.3	Washing	29
	8.3.1 <i>Manual detergent dosing</i>	29
	8.3.2 <i>Putting away washware</i>	29
	8.3.3 <i>Select wash programme</i>	30
	8.3.4 <i>Start wash cycle</i>	32
	8.3.5 <i>Emptying the washware</i>	33
8.4	Shutting down the dishwasher	33
8.5	Fill consumables	34
	8.5.1 <i>Replace canister</i>	34
	8.5.2 <i>Fill salt container</i>	35
8.6	Regeneration of the built-in water softener	36
8.7	Changing water	36
8.8	Malfunctions	37
	8.8.1 <i>Messages</i>	38
8.9	Change authorisation level	41
8.10	Service level	42
	8.10.1 <i>View parameters</i>	42
	8.10.2 <i>Ventilating the pipes</i>	43
	8.10.3 <i>Start regeneration manually</i>	43
	8.10.4 <i>Replace counter for partial desalination cartridge (optional)</i>	43
8.11	Dosing system level	44
9	MAINTENANCE AND CLEANING	44
9.1	Maintenance	46
9.2	Maintenance table	46
9.3	Daily cleaning	48
9.4	Cleaning the stainless steel surfaces	48
9.5	Descaling	49
9.6	Spare parts	50
10	NON-USE FOR SEVERAL DAYS	50
10.1	Break in operation (e.g. seasonal operation)	50
10.2	Commissioning after break in operation	50
11	DISMANTLING AND DISPOSAL	50
11.1	Disposal of packaging materials	51
11.2	Dismantling and disposal of the old device	51
12	ABBREVIATIONS.....	51
13	INDEX	52
14	NOTES.....	54

1 Notes on the operating instructions

The operating instructions as well as the applicable documents must be read before the first commissioning, kept for later use, and must be accessible to the operator at all times. Failure to observe the operating instructions may result in damage to persons and property.

These operating instructions can be downloaded via the following address:
www.meiko.info or <https://partnet.meiko-global.com>.

1.1 Product identification

These operating instructions apply to the following machine types:

UPster H 500 T M2:

M004DWHT10M2-20

1.2 Delivery contents

The delivery contents include:

- 1x Hood type dishwasher UPster H 500 M2
- Matching racks for glassware, crockery and containers, depending on machine model
- Connecting hoses for fresh water and waste water
- Documentation

1.3 Related documents

In addition to these operating instructions, there are other documents that are available depending on the authorisation:

Operator (included in delivery contents)	Authorised service technician
EC/EU declaration of conformity	Dimension sheet
Short operating instructions	Installation instructions
Wiring diagram	Installation instructions for optional components (e.g. GiO module separately)
	External dosing
	Service instructions

2 Liability and warranty

All of MEIKO's obligations arise from the relevant purchase contract, which also contains the entire and only valid guarantee provisions. These contractual guarantee provisions shall be neither extended nor restricted as a result of any explanations given in the instructions.

If you follow the instructions in this operating manual carefully, your dishwashing machine will always give you total satisfaction and will have a long service life.

The delivered system corresponds to the state of technology and safety regulations valid at the time of production/delivery.

The information, data and notes specified in the operating instructions correspond to the latest version at the time of printing. No claims for already delivered systems may be asserted based on these statements, illustrations and descriptions.

Claims must be reported to the manufacturer immediately after determination of the defect or error. Liability claims for personal injury or material damage as well as for operational problems are excluded if they are due to one or more of the following causes:

- Unintended use.
- Improper installation, commissioning, operation and maintenance.
- Operation of the machine or system with defective safety devices or improperly attached or non-functioning safety and protective devices.
- Noncompliance with the notes in the operating instructions regarding transport, storage, mounting, commissioning, operation and maintenance.
- Unauthorised design changes or settings on the machine or system beyond the intended purpose.
- Improper monitoring of parts subject to wear.
- Use of wear and replacement parts that are not from the manufacturer.
- Improperly performed repairs, inspections or maintenance.
- Catastrophes due to human-induced events or force majeure.

3 Safety

3.1 Symbol explanation

3.1.1 Notes in the instructions

In these operating instructions, important notes for safety are specially marked with symbols. Please always observe these notes to avoid accidents and damages to the system.

Warnings

Danger

Short description of the danger:

The signal word **DANGER** designates an immediately threatening danger. Failure to observe this leads to very serious injuries or death

Warning

Short description of the danger:

The signal word **WARNING** designates a possible danger. Failure to observe this can lead to very serious injuries or death.

Beware

Short description of the danger:

The signal word **BEWARE** designates a possible danger. Failure to observe this can lead to minor to medium injuries.

Application information

Caution

Short description:

The signal word **Caution** designates a possible danger. Failure to observe this can lead to damage to the machine or system.



Note

The signal word **Note** designates further information on the machine / system or its application.

3.1.2 Safety symbols in the instructions

The following note and danger symbols are used both in the document and on the machine. Observe these symbols and signs on the machine to avoid personal injury and material damage!

The symbols have the following meanings:

Symbol	Meaning
	Warning of hazardous areas
	Warning of dangerous electric voltage
	Warning of the danger of hand injuries Caution, keep hands away from parts that bear this warning symbol. The danger exists that hands can be crushed, pulled in or otherwise injured.
	Warning of hot surfaces and liquids
	Warning of the machine falling over
	Warning of environmental damage
	Do not spray with water
	No drinking water
	Access prohibited for persons with pacemakers
	Eye protection must be used or protective glasses must be worn
	Hand protection must be worn
	Read the operating instructions
	Disconnect before servicing or repair
	Potential equalisation connection

3.2 Requirements for the personnel

Commissioning, instructions, repairs, maintenance, assembly and installation of or on MEIKO machines must only be carried out/authorised by MEIKO-authorized service partners.

During operation it must be ensured that:

- Only adequately trained and instructed personnel are allowed to work on the machine.
- Personnel responsibilities for operation, maintenance and repairs must be clearly defined.
- Any personnel undergoing training are only allowed to work on the machine under the supervision of an experienced person.

The required qualifications for performing specific work at the machine are determined by MEIKO.

Activity	Persons	Trained operating staff	MEIKO authorised company tradesman	MEIKO authorised service technician
Installation/assembly				✓
Commissioning				✓
Operation, use		✓	✓	✓
Cleaning		✓	✓	✓
Check safety devices			✓	✓
Troubleshooting		✓	✓	✓
Troubleshooting, mechanical		✓	✓	✓
Troubleshooting, electrical			✓*	✓
Maintenance			✓	✓
Repairs			✓	✓

* with training as an electrician



Note

The instructions must be acknowledged in writing.

Qualified staff, as defined by the operating Instructions, are persons:

- over 14 years of age,
- due to their training, experience and instruction are able to perform the required activities,
- are authorised to perform the required activities by the person responsible for safety of the machine,
- who have been trained in first aid and in the on-site rescue arrangements,
- have read and understood the operating instructions and corresponding safety instructions and will follow them.

3.3 Residual risks

Phase	Activity	Nature of the hazard	Avoidance measure
Transport and assembly	Loading and unloading with forklift truck	Crushing/impact	<ul style="list-style-type: none"> Load-bearing capacity of the forklift truck must be adequate for the weight of the machine Please note the machine's centre of gravity Secure to prevent slipping
	Deposit at the installation site	Crushing/impact	<ul style="list-style-type: none"> Ensure that the ground beneath is capable of taking the load Ensure that the machine cannot tip
	Incorporate into on-site table unit	Shearing	<ul style="list-style-type: none"> Ensure that no shear points are created between the hood and the table
	Install freestanding machine	Crushing	<ul style="list-style-type: none"> Ensure that the freestanding machine is secured to prevent it from tipping backwards
	Install electrical connections	Electric shock	<ul style="list-style-type: none"> Adhere to the accident prevention regulations
	Install separate GiO MODULE (optional)	Tripping/falling/crushing	<ul style="list-style-type: none"> We recommend fastening the GiO MODULE to the wall/table/machine Mount freestanding module using solid base If needed, run module at 90 degrees (lying)
Commissioning	Fill with detergent/rinse aid	Eye injury/health risks	<ul style="list-style-type: none"> Wear safety eyewear/gloves Avoid contact with skin and eyes
	Activities in the machine	Hand injuries on sharp edges	<ul style="list-style-type: none"> Wear protective gloves
Operation	Filling/heating	Contact with hot water	<ul style="list-style-type: none"> Do not set machine in operation without tank cover sieve
	Programme is running		<ul style="list-style-type: none"> Do not open hood during cycle
	Loading and unloading the machine	Trapping of hand	<ul style="list-style-type: none"> To close the hood, use the handle designated for this purpose
		Broken crockery causing cuts/severing	<ul style="list-style-type: none"> Wash/clean washware in the specially designed rack in the machine Place small items in the appropriate rack inserts Washware must not come into contact with rotating parts of the machine
		Risk of snagging with loose clothing or items of jewellery	<ul style="list-style-type: none"> Wear suitable work clothing and sturdy shoes Do not wear rings, necklaces or other pieces of jewellery
		Slipping	<ul style="list-style-type: none"> Use non-slip floor coverings
		Contact with hot water	<ul style="list-style-type: none"> If necessary, allow washware to cool down If necessary, allow machine components to cool down before touching Do not remove tank cover sieve while appliance is in operation Protective gloves recommended Only ever use the hood handle or handles to open/close the hood
	Other activities	Swallowing of water in the wash chamber	<ul style="list-style-type: none"> Do not use the water in the wash chamber for food preparation or drink it
	Normal operation	Substandard wash performance due to failure of dosing units	<ul style="list-style-type: none"> Monitor wash performance If appropriate, repeat the programme
Refilling detergent/rinse aid	Eye injury/health risks	<ul style="list-style-type: none"> Wear safety eyewear/gloves Avoid contact with skin and eyes 	

Maintenance and cleaning	Any maintenance work	Electric shock	<ul style="list-style-type: none"> • Before opening the housing parts, ensure the mains switch has been disconnected and secured so that it cannot be turned on again
	Cleaning or maintenance	Contact with hot water or machine parts	<ul style="list-style-type: none"> • Allow machine components to cool down before touching • Wear protective gloves
		Hand injuries on sharp edges	<ul style="list-style-type: none"> • Wear protective gloves
	Cleaning	Poisoning	<ul style="list-style-type: none"> • Do not use aggressive cleaning or scouring agents • Only use descaling products suitable for commercial machines • Wear protective gloves
	GiO MODULE: replace filter cartridge	Water escaping	<ul style="list-style-type: none"> • Provide suitable vessel (e.g. base drip tray)
Dismantling and disposal	Dismantling	Eye injury/health risks	<ul style="list-style-type: none"> • Wear safety eyewear/gloves • Avoid contact with skin and eyes • If needed, clean hoses, dosing system and machine parts with fresh water
	Loading and unloading with forklift truck	Crushing/impact	<ul style="list-style-type: none"> • Load-bearing capacity of the forklift truck must be adequate for the weight of the machine • Please note the machine's centre of gravity • Secure to prevent slipping

3.4 Intended use

The dishwashing machine must only be used in accordance with its intended purpose and as per these operating instructions. The dishwashing machine is intended exclusively for commercial use.

The dishwashing machine is designed for cleaning dishes, cutlery, glassware, kitchen utensils, baking trays and containers.

The washware must be suitable for dishwashing machines. If there is any doubt, a consultation (size, version, basic suitability for dishwashing machine, etc) can be carried out with MEIKO to confirm suitability (info@meiko-global.com).

The following applications are expressly not intended:

- Processing hazardous substances in the machine (health hazards, in particular toxic, highly or extremely flammable and explosive substances).
- Operating the machine in an explosive environment.

3.5 Foreseeable misuse

The dishwashing machine must not be used for:

- Washing kitchen utensils with electronic components
- Cleaning textiles, oven cloths or steel sponges
- Washing utensils made of iron or utensils that must not come into contact with foodstuffs (e.g. ashtrays, candlesticks, etc)
- Cleaning living creatures
- Washing food for subsequent consumption
- Preparing foodstuffs in the machine
- Taking wash water to prepare food or for drinking
- Washing support grids of cooking hobs/gas hobs
- Filling the machine from an external source (e.g. shower)
- Disposing of dirty water using the dishwasher (e.g. from a cleaning bucket)
- Standing or sitting on machine parts (e.g.: door)
- Washing dishes made of wood or dishes that have wooden parts

- Washing plastic parts that are not heat and alkali-stable
- Washing parts made of aluminium (such as pots, containers or trays only with a suitable detergent to avoid black discolouration)
- Conversions and modifications by means of non-approved conversion kits

3.6 Fundamental safety and accident prevention regulations



Note

The following safety instructions aim to protect operating personnel as well as third parties and the dishwashing machine itself.

Please take note of the information in these instructions and the signs on the dishwashing machine.

However, safety can only be guaranteed during operation if all necessary measures are taken.

The operator of the machine has an obligation of care to ensure that these measures are planned for and also to check that they are correctly implemented.

The operator must ensure in particular that:

- The dishwashing machine is only used in accordance with its intended purpose. In the event of the machine being used or operated contrary to this, damage or risks may arise.
- In order to guarantee functionality and safety, only original spare parts supplied by the manufacturer may be used.
- The safety of the dishwashing machine is not impaired by the subsequent installation of a dosage system.
- Only appropriately qualified and authorised personnel operate, maintain and repair the dishwashing machine.
- No one sits or stands on the open door.
- Staff are regularly trained in all questions relating to occupational safety and environmental protection and are familiar with the operating instructions and, in particular, the safety information that they contain.
- The area around the machine is assessed with reference to the risk to other people, e.g. children; people with physical, sensory or mental impairments; people lacking in knowledge or experience. In case of doubt, special optional initiation functions other than conscious, intentional operation (i.e. operation from the screen) are to be deactivated.
- The dishwashing machine is only operated in perfect, functional condition, all protection devices and covers are installed.
- The safety and switching equipment is regularly tested to ensure it is functioning correctly.
- Dishwashers accessible from behind may only be operated with a rear cover.
- The required personal protective equipment is made available to and worn by maintenance and repair personnel.
- A functional test on all dishwashing machine safety systems is carried out at every regular maintenance appointment.
- None of the safety and warning notices affixed to the dishwashing machine itself are removed and all are legible.
- Upkeep (maintenance and inspection) is carried out on optional vendor parts according to the requirements in the corresponding instructions.
- Following installation, commissioning and handing over of the dishwashing machine to the customer/operator, no modifications are made (e.g. electrical or mechanical machine components).

Information on operating the dishwashing machine:

- Only operate the dishwashing machine under the supervision of trained personnel.
- Do not use the dishwashing machine if you are unsure about its operation.
- Always close all doors and flaps.
- Wear suitable work clothing.
- When working on the dishwashing machine, wear appropriate protective gloves.
- Allow machine components and washware to cool down before touching.
- At the end of operation:
 - Switch off the dishwashing machine at the on-site mains disconnection device. This is located in the electricity supply pipe for the machine.
 - Close the on-site stop valve in the fresh water supply line.

Information on use of detergent and rinse aid:

- Only use detergents and rinse aid suitable for commercial dishwashing machines.
- Acquire information from the manufacturers of these products.

Detergent and rinse aid may contain hazardous substances. The wash water used during operation contains chemicals.

- Never drink the wash water.
- Contact a doctor immediately if wash water is swallowed.
- Pay attention to the manufacturers' hazard warnings on the original canisters and safety data sheets.
- When handling chemicals, wear appropriate protective gloves and safety eye-wear.
- Do not confuse detergent and rinse aid.
- Ensure that the suction connections for the dishwashing machine are correctly connected to the canisters.

Information on the use of descaling agents

Residue from descaling agents can cause damage to the plastic components and sealing materials in the machine.

- Acquire information from the manufacturers of these products.
- Please observe the manufacturer's hazard warnings.
- Thoroughly remove any residue after use.

Information on cleaning the machine

Foam can cause malfunctions in the dishwashing machine and a poor washing result.

- Do not use a foaming manual dishwashing detergent for precleaning or for cleaning the machine.
- Allow machine components and washware to cool down before touching.

Information on cleaning the surrounding area

When cleaning the surrounding area, the machine can be damaged by aggressive external influences (steams, detergents) or the ingress of water.

- Do not use aggressive detergents (e.g. aggressive tile cleaner).
- If installed at ground level, never allow the surrounding area to flood.

Notices on electrics and electronics

There is a danger to life if exposed parts and damaged supply lines under electrical voltage are touched.

- Please take note of the warning information in these instructions and the signs on the dishwashing machine.
- Whenever you are working on electrical components in the machine, ensure that electrical connections are physically secure.
- Whenever you are working on electrical components in the machine, check wires and cables for any potential damage and replace, if necessary.

Incorrect cleaning can cause damage to the electronics.

- The dishwashing machine, switch cabinets and other electrical components must never be sprayed with a hose or high pressure cleaner.
- Ensure that no water can enter the machine by accident.

Notice on non-ionising radiation



The dishwasher does not specifically generate non-ionising radiation. For technical reasons, only the electric appliances emit non-ionizing radiation.

In the immediate vicinity of the dishwashing machine, the influence of active implants (e.g. cardiac pacemakers, defibrillators) can be ruled out with a high degree of probability.

3.7 What to do in the event of an emergency



- In dangerous situations, disconnect from the power supply using the locally available mains isolator.

4 Product description

4.1 Functional description

The UPster H 500 M2 is a commercial hood type dishwasher with a square rack.


The machine has one wash and one final rinse cycle. A temperature regulator maintains the set wash temperature of between 58-60 °C. A rotary pump circulates the water from the wash tank into the wash nozzles. The water jets hit the washware from different directions. This ensures uniform washing results.

The wash cycle is followed by a fresh water final rinse. The washware is rinsed with hot fresh water at 80-83 °C (65 °C for the glass programme) via a separate nozzle system. This heats up the washware for the drying process which follows.

At the same time, the final rinse water is used to regenerate the rinse water; this reduces the degree of soiling of the rinse water.


4.2 Overview illustration

Exterior view

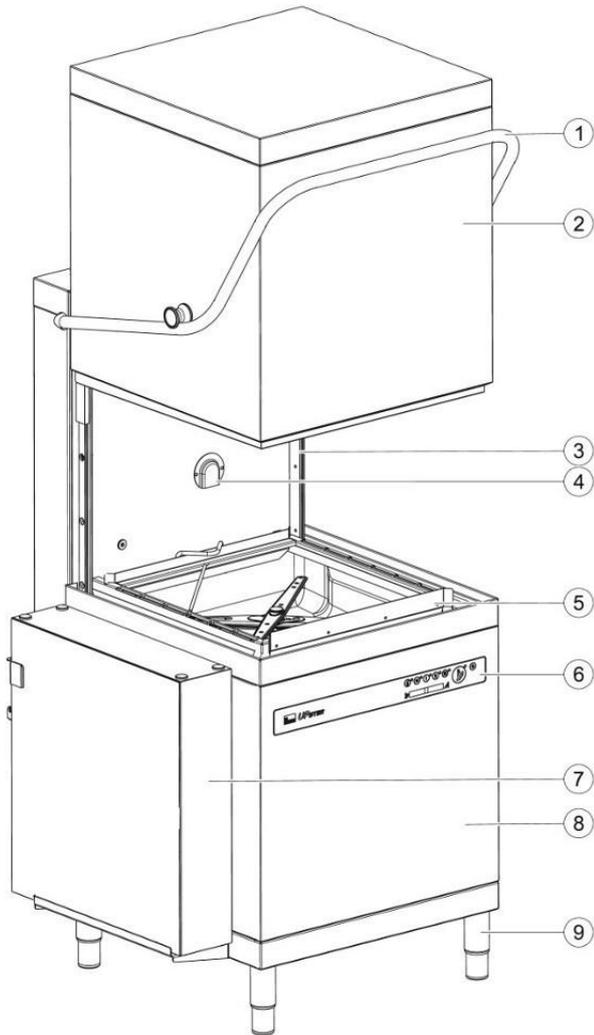

- 1 Hood
- 2 Hood handle
- 3 Hood guide rail
- 4 Overflow for fresh water system
- 5 Rack runner
- 6 Operating panel
- 7 Separate reverse osmosis module (GiO MODULE), optional
- 8 Lower section containing pumps, boiler and switch cabinet
- 9 Height-adjustable foot

Interior view

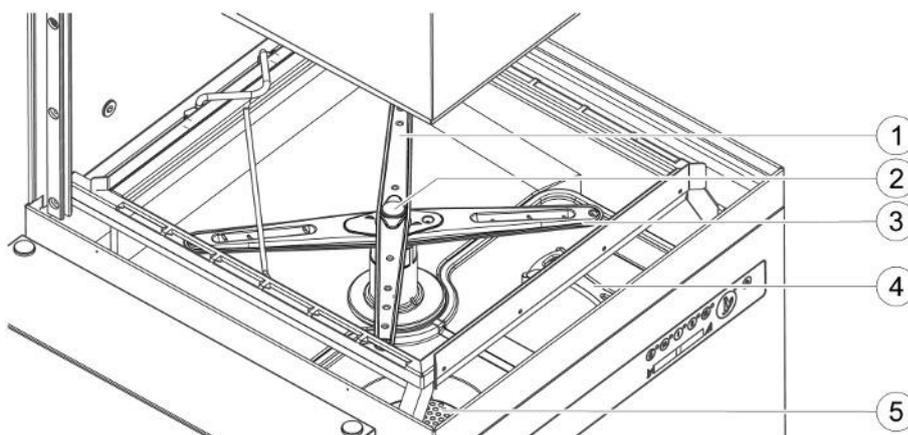

- 1 Wash arm (final rinse system)
- 2 Retaining screw for wash arm
- 3 Wash arm (cleaning system)
- 4 Sieve cover with grip
- 5 Suction strainer

4.3 Type label

The rating plate on the UPster H 500 is located on the left side or right side in the lower rear section of the machine. Additional rating plates are located on the switch cabinet behind the front panel, on the display and on the separate GiO MODULE (if it is part of the machine).

 MEIKO Maschinenbau GmbH & Co. KG Englerstraße 3 D-77652 Offenburg		①
		②
Type:		③
SN:		④
Voltage:	3 N/PE 400 V 50 Hz	⑤
El. Total load:	6.7 kW 14.0 A	⑥
EL. connect Boiler:	6,0 kW	⑦
Water pressure:		⑧
Boiler capacity:	7,9 l	⑨
Steam:		⑩
Year of Constr.:	2017	⑪
 		⑫

The following information can be found on the rating plate:

- 1 Name and address of manufacturer
- 2 Machine type
- 3 Model name
- 4 Serial number
- 5 Current type
- 6 Electrical connection
- 7 Rated power boiler
- 8 Water pressure
- 9 Boiler capacity
- 10 Steam connection
- 11 Year of manufacture
- 12 CE mark
- 13 IP protection rating

4.4 GiO MODULE

The module works according to the principle of reverse osmosis. Drinking water is pressed by a pump through a semi-permeable membrane. The membrane lets only water molecules through. The hardness components and salts (lime scale, etc.) contained in the water are held back. The clean water (permeate) is brought to the dish-washing machine; the materials held back (concentrate) are brought to the drain.

4.5 Blue operating concept



1 AktivPlus filter

The parts of the dishwasher that must be touched by the operator in operation and in daily use are blue. And so after a short briefing, operators know intuitively that they have to remove and clean the wash system, tank cover sieve and filter, for example.

4.6 Detergent and rinse aid



Warning

Risk of injury from contact with chemicals

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use eye protection.
- Wear protective gloves.
- Do not mix different chemical products.

Caution

- Only use products that are suitable and approved for commercial dishwashers. MEIKO recommends MEIKO ACTIVE detergent and rinse aid. MEIKO ACTIVE products are optimally adapted to MEIKO dishwashing machines.
- Do not mix different cleaning products.

The dishwashing machine is equipped by default with dosing units for dosing liquid detergent/rinse aid. Manual dosing with powder cleaner is not intended.

Optionally, the dishwashing machine can be equipped with or prepared for an external dosing system. In this case, further information can be found on the wiring diagram and in the External dosing document.

4.6.1 Detergent

Detergents are alkaline (pH value should be > 7) and are needed to dissolve soiling from the washware. The standard setting is 2 ml of detergent per litre of tank water. If necessary, the concentration can be adjusted depending on the water quality, washware and degree of soiling. This setting is made during commissioning by a service technician authorised by MEIKO or the chemical supplier.

Change dosing quantity, see chapter “Dosing system level” on page 44.

4.6.2 Rinse aid

Rinse aids are acidic (pH value should be between 2 and 7) and accelerate the drying of the washware by reducing the surface tension of the water so that it can run off the washware quickly.

The correct dosage is achieved when the water drips evenly from the washware and depends on the available water quality on-site. This setting is made during commissioning by a service technician authorised by MEIKO or the chemical supplier.


Change dosing quantity, see chapter “Dosing system level” on page 44.

4.6.3 Dosing equipment

The components of the dosing units are subject to high demands and must therefore be regularly maintained and, if necessary, replaced in accordance with the maintenance specification.

The service life of the dosing units and other components of the dishwashing machine depends on the use of suitable chemical products. MEIKO recommends MEIKO ACTIVE detergent and rinse aid. MEIKO ACTIVE products are optimally adapted to the dishwashing machine.

4.6.4 Suction lances

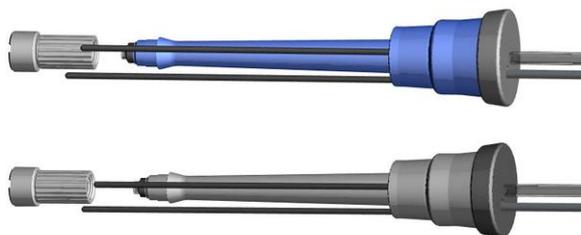

Suction lances with level monitoring for rinse aid (blue) and detergent (grey)

Suction lances ensure that the liquid chemical product is sucked in correctly. Suction lances are inserted vertically into the canisters and are optionally equipped with level monitoring. When the canister is running low, a message will appear on the machine display.

4.6.5 Change of products

⚠ Caution

When changing the detergent product (even to a product from the same manufacturer), crystallisation may occur, which can lead to failure of the dosing system.

- When changing the detergent product, flush the dosing system with warm water.

Procedure for changing the detergent product:

1. Provide a suitable container with warm water and insert the suction lance.
2. Thoroughly flush the dosing system several times by **venting the lines**, see page 43.
3. Wipe the suction lance and put it into the canister with the other detergent product.
4. Refill the dosing system by **venting the lines**.

For dishwashers with an internal reservoir, have the system flushed by a service technician authorised by MEIKO.

4.7 Installation of ActiveClean water softener (optional equipment)

The ActiveClean water softener automatically regenerates itself without intervention by the operator. All that is needed is to refill salt when the control light for the salt container lights up. The wash tank does not need to be emptied during regeneration, and wash processes remain possible. The regeneration water is guided directly into the waste water. The maximum intake temperature of the fresh water is 50 °C.

The water softener is preset to 30° dH at the factory. This value is adapted to the actual water hardness during commissioning. Additionally, this parameter has to be changed by a service technician (MEIKO-authorized) if the water hardness changes.

Capacity of the water softener between two regenerations

Hardness (° dH)	Capacity (l)
8	250
10	200
12	167
14	143
16	125
18	111
20	100
22	91
24	83
26	77
28	71
30*	67*
32	63
34	59
36	56
38	53
40	50
42	48

* Factory setting

4.8 AirConcept exhaust heat recovery (optional equipment)

The **AirConcept** exhaust heat recovery system is installed behind the hood:

- Loss of steam into the surrounding area is reduced.
- Saves energy by targeted suction of hot vapour.
- Fresh water is heated in the heat exchanger.
- Not available for dishwashers that are supplied with hot water.

4.8.1 Disinfection control

Caution

Glass corrosion and loss of decorations due to high water temperatures and long wash cycle times

- Make sure that the dishes and glassware used are suitable for the high stress placed on them.

MEIKO offers two types of machine with thermal disinfection for institutions with additional hygiene requirements. Both versions have greater heating performance in the wash tank than standard machines.

A₀ control

The term **A₀** refers to a way of measuring how microorganisms are eliminated by moist heat disinfection methods. By using a moist heat disinfection method, it is expected that a specific temperature over a period of time has the effect of eliminating a predictable number of microorganisms with a particular resistance.

The standard setting for a dishwasher with **A₀** – control is the hygiene value **A₀ 30**:

- The tank temperature during washing is up to 74° C.
- For tank temperatures of 65° C or higher, each tank temperature is assigned a factor.
- Using the measured tank temperature, a value is determined and added every second until the hygiene value **A₀ 30** is reached.
- The rinsing process runs until the end of the programme cycle time, but at least until the temperature value is reached. After this comes a pause for draining and the final rinse.



The display shows the current **A₀** value.

Thermolabel control

In a way which is similar to **A₀** control, machines with Thermolabel control have a disinfection process which uses moist heat. The dishwasher heats the rinse water to a higher temperature in order to eliminate germs. The efficacy of the disinfection can be tested using a measurement strip, the Thermolabel. The measurement strip changes colour after 4 seconds at 71 °C for a wash item.

- During washing, the tank temperature is heated up to 71° C and maintained at that temperature.
- The rinsing process runs until the end of the programme cycle time, but at least until the temperature value is reached. After this comes a pause for draining and the final rinse.
- Washing at high temperatures and long spells in the wash tank can lead to glass corrosion and premature wear to decoration.

Thermal disinfection - control

Thermal disinfection works according to the same principle as Thermolabel control, but other requirements apply:

- The disinfection temperature is $\geq 80^{\circ}$ C, which must be maintained on the washware for ≥ 30 s.
- During washing, the tank temperature is heated up to 76° C, and the final rinse temperature is 88 °C.
- The rinsing process runs until the end of the programme cycle time, but at least until the temperature value and specified stop time are reached. After this comes a pause for draining, final rinse and a subsequent application time.

Thermolabel and thermal disinfection control offer a disinfection effect that exceeds the standard, such as for hospitals, care homes, requirements according to the ÖGSV Guideline.

5 Technical data

MEIKO has created a dimensional drawing that shows machine dimensions as well as connection and consumption values.

Further data should be taken from the MEIKO dimensional drawing.

Net weights

Versions		Weight approx.
UPster H 500 M2		110 kg
+	ActiveClean water softener	9 kg
+	AirConcept heat recovery	20 kg
+	GiO MODULE reverse osmosis	23 kg

Noise emission

Workplace noise level $L_{pA} \leq 70$ dB (A).

5.1 EC/EU declaration of conformity

See separate EC-/EU-Declaration of Conformity.

6 Assembly

Warning

Danger of injury from entering a danger zone

Unauthorised persons might be in or enter the danger zone during transport, assembly, commissioning, maintenance and repair work. This can lead to injuries.



- Only permit qualified persons to perform work at the machine.
- Remove unauthorised persons from the danger zone.
- Cordon off danger zone and signpost it for third parties.
- Never remove or disable safety devices on the machine.
- Always wear cut-resistant protective gloves when removing housing parts and when working inside the machine!

6.1 Prerequisites for assembly

6.1.1 Checking the condition at delivery

- Check that the delivery is complete immediately after receiving it by comparing it with MEIKO's order confirmation and/or the delivery note.
- If applicable, submit a claim for any missing parts immediately to the freight forwarder and notify MEIKO.
- Check the machine for transportation damage.



Note

If there is any suspicion of transportation damage, the shipping company and MEIKO must be informed immediately in writing. Photograph any damaged parts and send the pictures to MEIKO.

6.1.2 Requirements for the installation area

The dishwashing machine is only frost-proof in as-delivered state or if equipped with special features (optional: frost removal).

Installation of the dishwashing machine in an area where the ambient temperature is below 0° C can result in damage to the internal water circuit components (e.g. pump, solenoid valve, boiler, etc.).

- Ensure that the storage and installation locations are always frost free.

There is a danger of slipping in the working area due to the use of water.

- After assembly, put in place non-slip floor coverings in the working area based on the general/location-specific safety regulations.

6.1.3 Requirements for the waste water connection

A waste water pipe is integrated into the drain pump.

- Connect the drain hose to the on-site waste water pipe.

– **For Australia only:**

The drain hose must be connected so that it is waterproof with a drain fitting in accordance with AS 1589 AS 2887 and a sanitary waste water pipe or sanitary waste water fitting in accordance with AS / NZS 1260.

- Depending on the dishwashing machine application, a grease trap may be included, based on the general/location-specific regulations.
- Observe maximum drain heights above the finished floor.

6.1.4 Requirements for the fresh water connection



Note

Where the water conductivity is $\sigma < 100 \mu\text{S}/\text{cm}$, the stainless steel variant of Air-Concept must be used. This is the case when using a reverse osmosis (GiO) or demineralisation system, for example.

For Australia only:

All work carried out must be in accordance with AS/NZS 3500.1!

Fresh water connections and their components must be carried out in accordance with local regulations, e.g. EN 1717/DIN 1988-100. The fresh water must be of the same quality as drinking water in microbiological terms. This also applies to processed water.

The basic model of the dishwashing machine features an air gap (type AA or AB as per EN 1717 or EN 61770). In the case of SVGW (Switzerland) and other countries, a type EA safety device (at least) is also required in front of the connection hose, depending on the machine version. Installation components and materials must be suitable and permitted in accordance with local regulations. A solenoid valve is integrated into the dishwashing machine's fresh water line. This, together with the leakage detector in the base drip tray in the subframe, ensures that in the event of a leak within the machine, the fresh water inlet is shut off.

Pressure range of the fresh water supply flow pressure upstream of the solenoid valve:

- Machines with air gap or pressure booster pump:
60 – 500 kPa (0.6 – 5 bar)
- Machines with a safety device to prevent backflow:
250 – 500 kPa (2.5 – 5 bar)

Maximum pressure

- Do not exceed maximum pressure of 500 kPa (5 bar).

Measures to ensure correct water pressure:

- If the minimum flow pressure is too low, increase the pressure using a pressure booster pump.
- If the maximum pressure is exceeded, limit the pressure using a pressure regulator.

Other measures:

- Ensure that no foreign iron particles can enter the appliance via the fresh water connection. The same also applies for contamination by other metal particles (e.g. copper shavings). Corresponding instructions are contained in the assembly plan.
- A dirt trap must be fitted in the fresh water supply to protect the solenoid valve.
- After the dishwashing machine has been unused for an extended period of time, drain the connection line and wash it before putting the machine back into operation.
- When replacing an old machine with a new one, make sure that the existing feed hose is exchanged for the new feed hose supplied with the machine.

6.1.5 Requirements to the electrical connection



Note

The wiring diagram is located in the switch cabinet of the dishwasher. This must remain in the dishwasher!

The rating plates with the electrical connection values are located on the switch cabinet behind the front panel, outside on the lower left or lower right, and on the separate GiO MODULE (if it is part of the machine).

Electrical connection must be carried out in accordance with the locally applicable regulations (e.g. HD 60364-1/IEC 60364-1/VDE 0100-100) so the machine can be connected to the mains supply in accordance with the installer's regulations. However, national installer's regulations may differ. The machine and accessory appliances are intended for permanent connection to the on-site power supply and the on-site protective equipotential bonding and have been tested accordingly before being brought to market.

Fuse protection

- Set up the machine according to the local conditions and according to the rated current (see rating plate) as a separately fused circuit (final circuit). Take note of the available connection variants.
- The requirements for limiting voltage changes, fluctuations and flicker in accordance with IEC 61000-3-11 for this dishwashing machine are fulfilled if the network has a current-carrying capacity of ≥ 100 A.


Main switch/mains connection cable

- Install a main switch with all-pole disconnection from the mains in accordance with the regulations for installers in the permanently installed on-site installation.
- The main switch must be easily accessible for the operating personnel.
- The contact opening width must correspond to overvoltage category III in each pole.
- Mains power cables, unless part of the standard product scope of supply, must be oil-resistant, sheathed, flexible cables no lighter than a normal polychloroprene-sheathed cable (or other equivalent synthetic elastomer) with the marking 60245 IEC 57.
- Refer to the circuit diagram for technical data for the main switch such as torque and stripping length.

Electrical safety

- The electrical safety of this machine is only ensured if it is connected to a properly installed protective conductor system. It is very important to verify this fundamental safety feature. If in doubt, have the building wiring checked by an electrician.
- Carry out the protective measures as well as the connection of the equipotential bonding in accordance with the regulations of the local power supply companies as well as the locally applicable regulations.
- As an alternative to equipotential bonding, the operator can, acting on its own responsibility, use a mains-side residual current device (RCM or RCD) for personal protection. A type "A" according to IEC 60755 is sufficient.

Position of the protective equipotential bonding

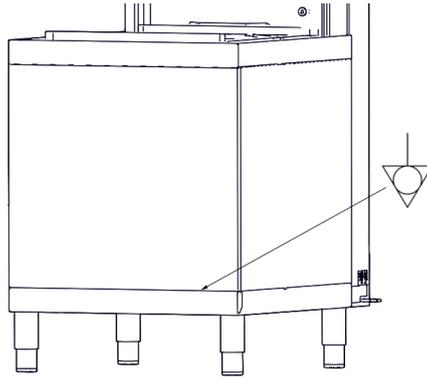


The screw for the equipotential bonding is located behind the cover on the front of the machine.

6.2 Transport

⚠ WARNING – danger of injury due to machine tipping

- Only qualified personnel may carry out transport works.
- Please note safety notices on the packaging.
- Always transport the machine on a wooden frame only.
- Wear protective gloves and safety shoes.

The packaging is specifically designed to allow the appliances to be moved safely and securely using a pallet jack. For safe transport, the dishwashing machine is supported by a special square timber frame.

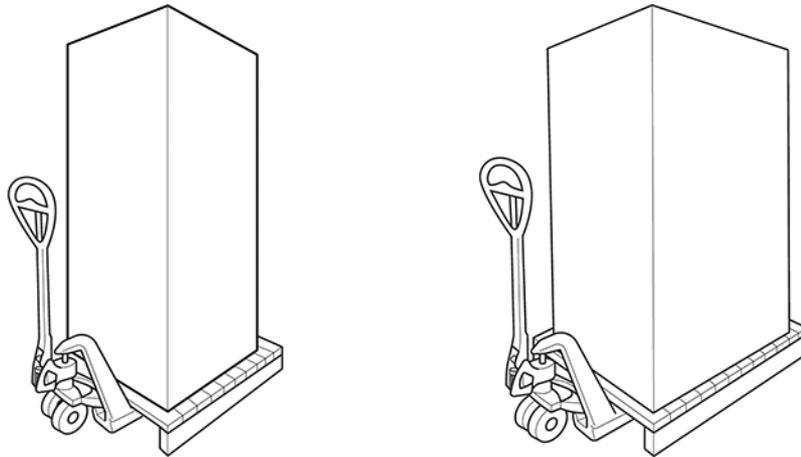

- Transport with care.
- Observe the instructions for safe transport on the packaging.
- Open packaging using a suitable tool.
- Unpack dishwashing machine only once transport is completed.

6.3 Perform assembly



⚠ Warning

Danger of injury due to machine tipping

If machine is freestanding and not secured, it could fall over and cause crushing.

- If machine is freestanding, it must be secured long term to prevent tipping.
- Wear protective gloves and safety shoes.

⚠ Beware

Improper fresh water connection

Backsiphonage of non drinking water into the water supply system

- Have the fresh water connected by a qualified professional and in accordance with local regulations.

Caution

Material damage due to ingress of pressurised media

- Shut off the fresh water supply at the main valve prior to installation works.
- Check that all lines are securely connected.

Caution

Material damage due to escaping steam

Small quantities of steam may escape through the dishwashing machine's hood area. It is possible that adjacent furniture may warp.

- Protect adjacent furniture from warping.
- If possible, avoid installing the machine in an area close to furniture susceptible to warping.



Note


When installing non-MEIKO tables on the hood type machine, ensure that no risks arise at the joint with the hood, such as danger of crushing or shearing.



Notice

Assembly may be performed **only** by an authorised service technician.

- Assembly must be carried out in accordance with the installation drawing.
- Machine is intended for installation in front of a wall.
 - Otherwise, the machine must be secured against tipping.
 - A screw-on base is available for freestanding installation.
- Machine is intended for installation with table installation.
- Ensure the machine is level in both directions by using a spirit level.
- Compensate for an uneven floor by adjusting the feet.
- Table joints must be sealed with a detergent-resistant sealant (e.g. silicone).
- Check that the machine is stable.

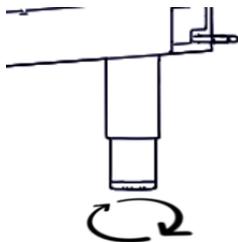

Disposal of packaging materials, see chapter "Dismantling and disposal" on page 50!

7 Commissioning

Warning



Danger of injury from entering a danger zone

Unauthorised persons might be in or enter the danger zone during transport, assembly, commissioning, maintenance and repair work. This can lead to injuries.

- Only permit qualified persons to perform work at the machine.
- Remove unauthorised persons from the danger zone.
- Cordon off danger zone and signpost it for third parties.
- Never remove or disable safety devices on the machine.
- Always wear cut-resistant protective gloves when removing housing parts and when working inside the machine!

7.1 Check prerequisites for commissioning

Caution

Material damage due to escaping steam

Small quantities of steam may escape through the dishwashing machine's hood area. It is possible that adjacent furniture may warp.

- Protect adjacent furniture from warping.
- If possible, avoid installing the machine in an area close to furniture susceptible to warping.

Prerequisites to be provided by the customer:

- Consistently frost free storage and installation area.
- Anti-slip floor coverings installed in the work area around the dishwashing machine.
- Electrical connection in accordance with the dimensional drawing.
- Fresh water connection in accordance with the dimensional drawing.
- Waste water connection in accordance with the dimensional drawing.

7.2 Perform commissioning



Note

Instruction and initial commissioning may be performed **only** by an authorised service technician! The operator must not use the dishwashing machine before completing training.

To avoid damage to the appliance or dangerous injuries during commissioning of the machine, please note the following points:


- Check supplier parts (e.g. external water processing devices or heating pumps). More detailed information can be found in the relevant operating instructions.
- Ensure that all tools and foreign parts are removed from the machine.
- Make sure that any escaped fluids have been removed.
- Before commissioning, activate all safety systems and door switches (on under-counter machines).
- Check all screw connections sit securely.
- For dishwashing machines with GiO Module, attention must be paid to the "Commissioning certificate for GiO Modules" and the instructions adhered to accordingly.

8 Operation/use

8.1 Membrane key pad

The dishwasher is equipped with a membrane key pad. For dishwashers with ActiveClean, it includes 5 operating keys and 6 control lights. Without ActiveClean, there are 2 fewer control lights. A display reports the current temperatures of the wash and rinse water and displays information messages and error codes, if applicable. Control lights with the keys show readiness to operate, the active wash programme, the current wash cycle and, if applicable, necessary and active regeneration.

The meaning of each of the keys and symbols is described below.

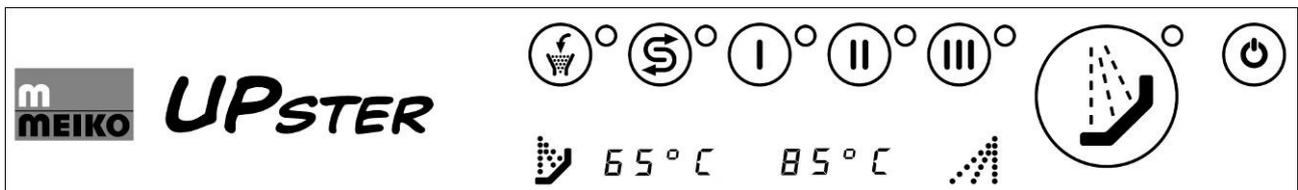

Key/symbol	Meaning
	On/off key / programme termination
	Wash key with control light Control light lit: wash programme is running Control light flashing: self-cleaning programme / drain programme is running
	Wash programme keys 1 – 3 with control lights Control light 1, 2 or 3 lit: dishwasher ready to run / wash programme 1, 2 or 3 selected Control light 1, 2 or 3 flashing: dishwasher is being made ready for operation
	Salt container control light (ActiveClean) Control light lit: refill salt
	Regeneration control light (ActiveClean) Control light lit: regeneration active
	Current wash temperature
	Current final rinse temperature

8.2 Prepare dishwasher



⚠ Warning

Risk of injury from contact with chemicals

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use eye protection.
- Wear protective gloves.
- Do not mix different chemical products.

⚠ Caution



Danger of crushing

Body parts could be crushed when closing hood.

- When the hood is moving downwards, ensure that no body parts are between the hood and objects located underneath.
- Close the hood with both hands on the hood handle.

⚠ Beware

Danger of injury or material damage due to storing items on the hood

Items may fall down when hood moves.

- Ensure that no items are to be found on top of the hood.

8.2.1 Putting the machine into operation



The dishwasher is closed and does not have a rack inside.



1. Press **on/off key**.



The dishwasher is filling and heating up. During this time, the control light flashes over the selected wash programme key. The time required for the machine to be ready to operate depends on the temperature of the water supply and the installed boiler or tank heating capacity.




When the machine is ready to operate, the control light above the selected wash programme key is lit permanently.


System operators must be very familiar with the Operating Instructions of the dishwashing machine. Incorrect operation may result in personal injury or material damage.



1. Ensure the water supply is available.

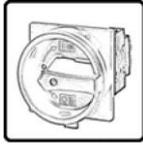

2. Switch on the local mains switch.

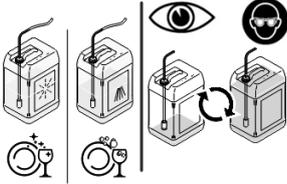


3. Check detergent and rinse aid and top up, if required, see chapter "Fill consumables" on page 34.

4. Ensure that the hoses are fed down to the base of the container.




Note


If there is air in the hoses, the automatic dosing will not function correctly. The relevant pipe must be ventilated, see chapter "Ventilating the pipes" on page 43.

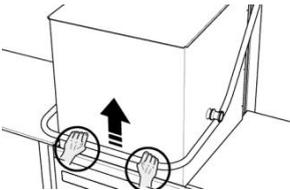

5. Open hood with both hands.

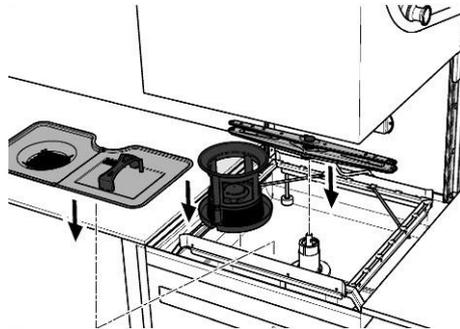

6. Insert filter, tank cover sieve and wash systems (top and bottom).

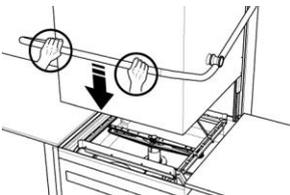

7. Close hood with both hands.

8.3 Washing

8.3.1 Manual detergent dosing

If no detergent dosing pump is present, the detergent has to be added manually to the wash water.

For a detergent concentration of 2g/l, a pre-dosage of 40 g is required. Perform the pre-dosage immediately after readiness to operate is achieved. Add 30 g after every 5 wash cycles.

Scatter powdered detergent evenly on the tank water or add it dissolved, in order to prevent discolouration on stainless steel parts.

Rinse aid is automatically dosed!

8.3.2 Putting away washware



- All hollow containers must always be loaded upside down. Otherwise the water will not be drained from the wash ware and brilliant drying will not be possible.



- Place plates, trays and dishes into the baskets at an angle. The inner surfaces face upwards.



- If cutlery holders are used, always insert the cutlery pieces with the handles down.
- Mix up the spoons, knives and forks as much as possible in each cutlery basket, since similar cutlery pieces may nest together.
- Do not put too many cutlery pieces into the individual cutlery baskets.




- Do not stack crockery items on top of each other in the basket. Direct access to the wash water would be more difficult and the washing times would have to be unnecessarily long. Shorter washing with baskets which are not overfilled is more economical.

8.3.3 Select wash programme



1. Press the desired wash programme key.



The control light of the selected wash programme key is lit.

Wash programme	Meaning	Washware
	Short programme•	Lightly soiled washware
	Standard programme,	Normally soiled washware
	Intensive programme <i>f</i>	Heavily soiled washware pots, containers, kitchen utensils

Programme configuration

Depending on the machine type and the electricity and water supply, the programme configuration can vary. The programme configuration is shown in the following table.

Programme table

Wash programme no.	Setpoint boiler temperature	Washing time setpoint	
		Washing	Total
	[°C]	[s]	[s]
1	83	42	60
2	83	72	90
3	83	102	120
4	83	162	180
5	83	192	210
6	83	222	240
7	83	342	360
8	65	42	60
9	65	72	90
10	65	102	120
11	65	162	180
12	65	192	210
13	65	222	240
14	65	342	360
15	85	42	60
16	85	72	90
17	85	102	120
18	85	162	180
19	85	192	210
20	85	222	240
21	85	342	360
22	80	42	60
23	80	72	90
24	80	102	120
25	80	162	180
26	80	192	210
27	80	222	240
28	80	342	360
29	83	252	270
30	83	282	300
31	85	252	270
32	85	282	300
33 - 50	83	72	90



Note

The concentration of the rinse aid in the water remains constant: if the rinse time is changed, the dosage amount of the rinse aid changes correspondingly.

8.3.4 Start wash cycle

⚠ Caution


Danger of crushing

Body parts could be crushed when closing hood.


- When the hood is moving downwards, ensure that no body parts are between the hood and objects located underneath.
- Close the hood with both hands on the hood handle.



1. Clear the washware (removing any large food residues, napkins, tooth picks, lemon peel etc.).
2. Put the washware into the rack.

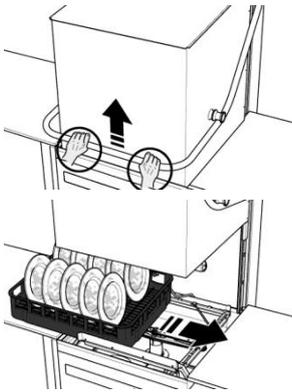


3. Open hood with both hands.



4. Insert the rack into the dishwasher.
5. Centre the rack correctly in the rack holder.



6. Ensure that the correct programme has been selected, see chapter "Select wash programme" on page 30.

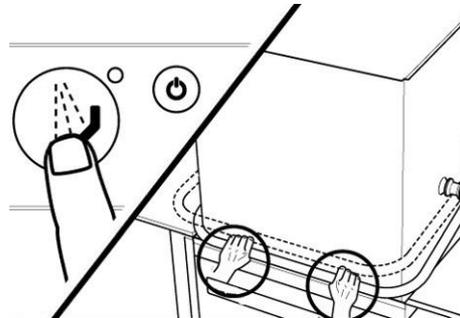

7. Close hood with both hands.
8. Push handle down briefly or press **wash key**.

The control light above the wash key is lit. The machine washes automatically and switches the programme off after completion.




The wash cycle time may differ from the set programme running time if the programme running time is not sufficient to heat up the boiler and tank water to the pre-set temperature. In this case, the cycle time is automatically extended. This means that the dishwasher runs until the required temperatures are reached, but max. 5 minutes.

8.3.5 Emptying the washware

⚠ Caution

Danger from hot wash water, washware and machine parts

- Wear protective gloves if necessary.
- Let the washware cool down before emptying, if necessary.
- Let the machine cool down before touching machine parts, if necessary.
- Never open the machine door or hood during a wash cycle.
- Only open and close the hood/door using the designated handle(s).

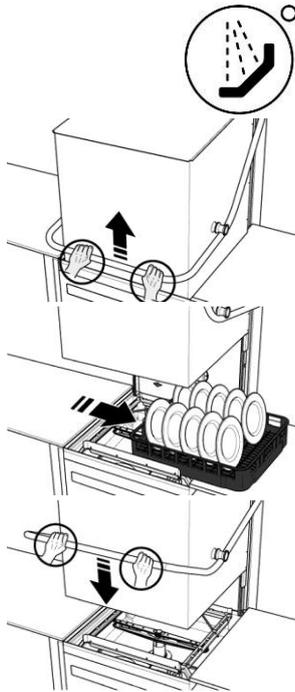

After the programme ends, the control light above the wash key turns off and an acoustic signal sounds.

1. Open hood with both hands.

2. Carefully remove the rack.

3. Close hood with both hands.

8.4 Shutting down the dishwasher

➡ The dishwashing machine is closed and does not have a rack inside.



1. Press the **On/Off button**. All control lights turn off.



2. Press the **wash key** to start the self-cleaning programme.



The control light on the wash key is flashing. The rinse water is pumped out and the wash chamber is sprayed with hot fresh water. After the programme ends, the control light turns off.

➡ After the end of the process, clean the machine, see chapter “Daily cleaning” on page 48.

8.5 Fill consumables



Warning

Risk of injury from contact with chemicals

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use eye protection.
- Wear protective gloves.
- Do not mix different chemical products.

8.5.1 Replace canister



Note

Information on cleaning chemicals, see chapter “Detergent and rinse aid” on page 16.



Note

The canisters for detergent and rinse aid are located in close proximity to the dish-washing machine.




Note

When using a suction lance which detects whether a canister is empty, a shortage of detergent or rinse aid will be indicated on the display.



A canister is empty.

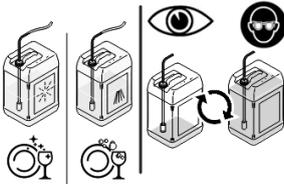

1. Remove the suction lance from the empty canister and insert it into a full canister.

2. If necessary, ventilate the pipelines, see page 43.

8.5.2 Fill salt container


Caution

Damage to water softener if salt container is not filled

Fill empty salt container promptly if **salt container control light is red!**



If the capacity of the installed water softener is largely exhausted, the red control light above the symbol for the salt container lights up.

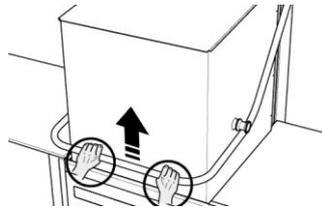


1. Open hood with both hands and fill salt solution container with 2.2 kg of regeneration salt (sodium chloride with a grain size of 0.3 - 1 mm). If possible, use a loading chute!


➔ During filling, water and salt particles may overflow from the salt container!



2. Clean the seal and thread of the salt solution container and close tightly. The ingress of wash water can cause capacity loss in the water softener!

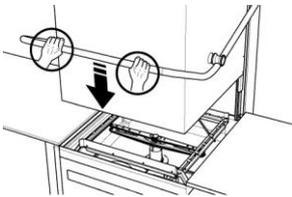

3. Close hood with both hands.

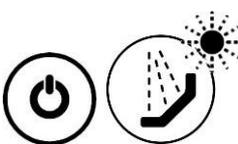


4. Start the self-cleaning programme (if necessary, switch off the dishwasher using the on/off key and then press the wash key) to dissolve any salt particles that have escaped and pump them out of the tank. If the salt remains in the wash tank for a long time, this can result in corrosion, and even pitting, in the tank bottom.

➔ Regeneration starts automatically once machine is ready for operation, see chapter "Putting the machine into operation" on page 27 and on the next page.

8.6 Regeneration of the built-in water softener

The **ActiveClean** water softener automatically regenerates itself without intervention by the operator.



The control light shows the ongoing regeneration (duration: approx. 8 minutes). The dishwasher can be used for a programme run as normal. If a second programme run is started during the regeneration time, the wash time is lengthened until regeneration is completed. Then the pause for draining and fresh water rinse follow.


Regeneration can be started manually, if necessary, see page 43.

8.7 Changing water

A water change programme can be assigned to the wash programme keys. In the standard setting, the water change programme is stored at the wash programme key III (if present).

The dishwasher washes normally and empties the tank. The fresh water final rinse follows. The water from the fresh water final rinse is already used for refilling the wash tank. The control light above the wash key goes out.


The following options now exist:

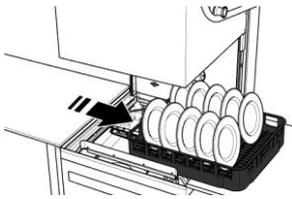

- Open hood, remove rack, close hood.



Machine is made ready for operation.



- Press wash program key I or II.




Machine is made ready for operation.



- Open hood, remove rack, close hood and press wash key.



Machine is made ready for operation and the wash programme is started.



- Press the on/off key and then the wash key.



The self-cleaning programme is started in order to take the dishwasher subsequently out of operation.

8.8 Malfunctions

If the described operational problems occur repeatedly, the cause must be identified.

Occasional malfunctions

Malfunction	Possible cause	Remedy
Dishwashing machine doesn't fill up	No water present	Open the shut-off valve
	Dirt trap clogged	Clean the dirt trap
	Open hood	Close hood
Final rinse does not spray	No water present	Open the shut-off valve
	Dirt trap clogged	Clean the dirt trap
Streaks / smears on the washware	Unsuitable rinse aid	Change product
	Incorrect dosing quantity	Adjust dosing quantity
	Water pre-treatment defective	Check water pre-treatment
Strong formation of foam in the wash tank	Dirt level too high	Prepare the washware more thoroughly/change tank water more frequently
	Manual dishwashing detergent used	Do not use a foaming manual dishwashing detergent for precleaning or for cleaning the machine. Foam can cause malfunctions in the dishwashing machine and a poor washing result.
	Unsuitable detergent	Change product
	Unsuitable rinse aid	Change product

As a rule, faults that are not described here require assistance from an authorised service technician. Please contact your subsidiary or authorised dealer.

8.8.1 Messages



When a malfunction occurs, an information or error message (**INFO/ERR**) is displayed.

- Information messages (**INFO**) can be acknowledged with the wash key. If the cause has been remedied (see table), operation can be continued.
- Error messages (**ERR**) usually require the deployment of an authorised service technician!
- If the machine displays an info or error message not listed in the following tables, contact your service technician!

INFO	Description	Possible cause	Measures/remedial action
120	Emergency programme active	<ul style="list-style-type: none"> • No boiler/tank heating • No fresh water supply 	<ul style="list-style-type: none"> • Possible to continue work at limited capacity • Call a service technician!
121	Door/hood not closed	<ul style="list-style-type: none"> • Door/hood open • I/O circuit board defective • Microswitch defective • Microswitch not correctly set 	<ul style="list-style-type: none"> • Close door/hood • Call a service technician!
122	Incorrect password/no authorisation	<ul style="list-style-type: none"> • Code incorrectly entered 	<ul style="list-style-type: none"> • Enter code again
123	Factory setting parameter list	<ul style="list-style-type: none"> • Switch supply voltage on/off 	<ul style="list-style-type: none"> • No intervention by the operator is necessary • Message disappears after 5 min.
126	Maintenance necessary	<ul style="list-style-type: none"> • The set operating hours (P 122) or batch number (P 123) has been reached 	<ul style="list-style-type: none"> • Possible to continue working • Call a service technician!
420	Lack of rinse aid (with integrated fill-level detection)	<ul style="list-style-type: none"> • Canister empty • Suction lance not correctly introduced 	<ul style="list-style-type: none"> • Replace empty canister • Check suction lance • Where appropriate, ventilate pipes
520	Lack of detergent (with integrated fill-level detection)		
720	Regeneration is running	<ul style="list-style-type: none"> • Regeneration programme has been started and is running 	<ul style="list-style-type: none"> • Let regeneration programme run to completion • Regeneration programme cannot be interrupted • Possible to continue working
721	Regeneration not possible	<ul style="list-style-type: none"> • Salt container empty 	Fill salt container
722	Salt container empty	<ul style="list-style-type: none"> • No salt present • No water in the salt container 	Fill salt container <ul style="list-style-type: none"> • Where appropriate, Fill water in the salt container

ERR	Description	Possible cause	Measures / remedial action
001	EEPROM error	<ul style="list-style-type: none"> EEPROM <ul style="list-style-type: none"> Not present/defective Installed incorrectly Incorrect data/empty 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
111	Floor pan leakage	<ul style="list-style-type: none"> There is a leak 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
118	Signal of the two door contact switches unequal	<ul style="list-style-type: none"> Malfunction/defect door contact switch 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
201	Boiler level not reached during first filling (with integrated pressure booster pump)	<ul style="list-style-type: none"> Fresh water inlet insufficient (water tap closed) Feed hose kinked/disconnected/leaks 	<ul style="list-style-type: none"> Check water supply Check feed hose Check pre-filter/sieve and clean, if necessary Where appropriate, call a service technician!
202	Boiler level not reached on time during filling (with integrated pressure booster pump)	<ul style="list-style-type: none"> Inlet filter soiled Solenoid valve defective Boiler switch defective 	
203	No change detected by the boiler level switch when emptying (with integrated pressure booster pump)	<ul style="list-style-type: none"> Pressure booster pump defective Plug connections disconnected (e.g. pressure booster pump) Start capacitor defective Boiler level switch defective 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
204	No change yet detected at the boiler level switch (with integrated pressure booster pump installed) after the rinse time expired	<ul style="list-style-type: none"> No signal to or from pressure booster pump and I/O circuit board No signal boiler full - from I/O circuit board 	
205	Boiler temperature not reached after max. heat time (P310)	<ul style="list-style-type: none"> Boiler heating defective/melting beads, heating element Temperature sensor defective, incorrect installation position Boiler protection defective, output switch triggered No signal from I/O circuit board 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
206	Wash time increase	<ul style="list-style-type: none"> Boiler not ready for final rinse on time (temperature or level not reached) Boiler heating defective (melting beads) Temperature sensor defective Boiler protection defective, output switch triggered No signal from I/O circuit board 	<ul style="list-style-type: none"> Acknowledge message, continued work possible Let programme run without intervention by the operator If it occurs frequently, call a service technician!
210	Boiler temperature sensor short-circuit	<ul style="list-style-type: none"> Sensor defective Sensor position not correct 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
211	Boiler temperature sensor interruption	<ul style="list-style-type: none"> Plug contact not connected properly 	
212	"Actual" boiler temperature too high (>95°C)	<ul style="list-style-type: none"> Contacting sticking Incorrect sensor/defective sensor 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!

ERR	Description	Possible cause	Measures / remedial action
301	Number of circulatory pumping cycles for tank filling exceeded Tank level analysis disrupted	<ul style="list-style-type: none"> Feeding water pressure too low Inlet filter soiled Rinse nozzles dirty Air trap dirty Condensate in level pipe Feed hose kinked/disconnected/leaks 	<ul style="list-style-type: none"> Check water supply Check feed hose Clean inlet filter Clean rinse nozzles Call a service technician!
302	While drain pumping during the wash programme, tank level 1 is not fallen below on time (with integrated drain pump)	<ul style="list-style-type: none"> Drain pump output too low Drain pump dirty/defective Impeller loose Drain pump plug connection open 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
303	While drain pumping during the wash programme, tank level 3 is not fallen below on time (with integrated drain pump)	<ul style="list-style-type: none"> Start capacitor defective Tank level analysis disrupted Aquastop does not close correctly No signal from I/O circuit board 	
304	Tank temperature not reached after max. heat time (P314)	<ul style="list-style-type: none"> Tank heating defective/melting beads, heating element Temperature sensor defective, incorrect installation position Tank protection defective, output switch triggered 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
305	Number of boiler fills insufficient for rinsing. Tank level 2 not reached	<ul style="list-style-type: none"> Feeding water pressure too low Inlet filter soiled Rinse nozzles dirty Air trap dirty Condensate in level pipe Feed hose kinked/disconnected/leaks Level sensor defective Plug contact not connected properly 	<ul style="list-style-type: none"> Check water supply Check feed hose Clean inlet filter Clean rinse nozzles Call a service technician!
306	Max. tank level exceeded Tank level analysis disrupted.	<ul style="list-style-type: none"> Air trap dirty Condensate in level pipe Level sensor defective Plug contact not connected properly 	<ul style="list-style-type: none"> Empty dishwashing machine and refill Call a service technician!
307	Tank level sensor defective	<ul style="list-style-type: none"> Connection plug loosened Sensor or I/O circuit board defective 	<ul style="list-style-type: none"> Call a service technician!
310	Temperature sensor short-circuit	<ul style="list-style-type: none"> Sensor defective 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!
311	Temperature sensor interruption	<ul style="list-style-type: none"> Sensor position not correct Plug contact not connected properly 	
312	Actual tank temperature too high (>85°C)	<ul style="list-style-type: none"> Contacting sticking Incorrect sensor/defective sensor 	<ul style="list-style-type: none"> Not possible to continue working Call a service technician!

8.9 Change authorisation level

Key/symbol	Meaning
	On/Off key Start programming
	Wash key Confirm entry and jump to next position in the code
	Wash programme key 1 Increase value by one
	Wash programme key 3 Decrease value by one



1. Press and hold the On/Off key for about three seconds.

Code 1- - - -

Code -0- - -



2. Enter the service code for the required authorisation level.

1-1 - - - -

Info 122

After entry of the correct code, the desired authorisation level (1, 4) is displayed in the left field in the first digital position. If the entry is incorrect, the message **Info 122** appears.

Authorisation level 1 – Service level

Read service data (**service code: 10000**)

The operator can view the service data.

Read/modify service data (**service code 10001**)

The operator can carry out all functions required for normal operation and configure the settings.

Authorisation level 4 – Dosing equipment level

Read settings (**service code: 40000**)

The operator can view the data for the dosing technology.

Read/modify settings (**service code 40044**)

The operator can view/edit all the relevant parameters for the dosing technology.

8.10 Service level

Code display	Meaning
	View parameter, see page 42.
	Vent rinse pipe, see page 43.
	Vent detergent line, see page 43.
	Manually start regeneration, see page 43.
	Reset the counter for replacing the partial desalination cartridge, see page 43.

8.10.1 View parameters

1. Switch to authorisation level 1 **Service level (10000)**, see chapter "Change authorisation level" on page 41.



2. Select the entry 1-1.



3. Confirm the selection.



The first parameter is displayed.

4. Scroll through and view the parameters using the wash programme keys.



The service level can be exited with the **On/Off key**.

8.10.2 Ventilating the pipes

The ventilation of the detergent or rinse pipes must be performed if air is sucked in from the dosing units. This occurs if a canister is completely emptied during operation, or if one of the suction lances is not threaded through to the base of the canister.

1. Switch to authorisation level 1 **Service level (10001)**, see page 41.



2. Select the entry 1–3 for ventilating the detergent pipe, and entry 1–2 for the rinse pipe.



3. Confirm the selection.



The respective pipes are being ventilated, and the remaining time in seconds is displayed. If necessary, repeat ventilation.



Venting can be cancelled with the **on/off key**.

8.10.3 Start regeneration manually

1. Switch to authorisation level 1 **Service level (10001)**, see page 41.



2. Select the entry 1–4.



3. Confirm the selection.



Regeneration begins.



The service level can be exited with the **On/Off key**.

8.10.4 Replace counter for partial desalination cartridge (optional)

For dishwashers with a partial desalination cartridge and activated end-of-service indicator, the counter must be reset after changing the partial desalination cartridge.

1. Switch to authorisation level 1 **Service level (10001)**, see chapter “Change authorisation level” on page 41.



2. To reset the counter, select entry 1-5.



3. Confirm the selection to reset the value.



The setting level can be departed with the **on/off key**.

8.11 Dosing system level

1. Switch to authorisation level 4, Dosing technology level (40000 or 40044), see page 41.

➔ The parameters relevant for the dosing technology are displayed and can be changed.

Code display	Meaning	Adjusting range
P104	Rinse aid dosing quantity	0.10 - 1.00 ml/L
P105	Detergent dosing quantity	0.10 - 20.00 ml/L
P218	Lack of rinse aid	1/0 = Display on/off
P219	Lack of detergent	1/0 = Display on/off
P224	Rinse aid dosing unit activation method	0 = Do not activate 1 = Activate through calculated running time 2 = Activate as per pressure booster pump 3 = Activate as per wash pump
P225	Detergent dosing unit activation method	0 = Do not activate 1 = Activate through calculated running time 2 = Activate as per pressure booster pump 3 = Activate as per wash pump
P321	Rinse aid dosing unit output	0.10 - 10 L/h
P322	Detergent dosing unit output	0.10 - 20 L/h
P326	Rinse pipe bleed time	0 - 255 s
P327	Detergent pipe bleed time	0 - 100 s

9 Maintenance and cleaning



⚠ Warning

Danger to life from electric shock

Contact with live electrical parts can lead to serious injury or death.

- Work at or repairs to the electrical system must be conducted by a qualified electrician who complies with the electrotechnical rules.
- Disconnect the machine from the power supply before working on the electrical system. To do this, turn the local mains switch to **OFF** and ensure that it can't be switched back on again.



⚠ Warning

Danger to life from electric shock if cover panels are open

If the machine is operated without cover panels, electrified parts are freely accessible. Contact with these parts can lead to serious injury or death.

- Disconnect the machine from the power supply before opening the cover panels. To do this, turn the local mains switch to **OFF** and ensure that it cannot be switched back on again.
- Attach all cover panels before placing the machine back in operation.



⚠ Warning

Danger of injury from entering a danger zone

Unauthorised persons might be in or enter the danger zone during transport, assembly, commissioning, maintenance and repair work. This can lead to injuries.

- Only permit qualified persons to perform work at the machine.
- Remove unauthorised persons from the danger zone.
- Cordon off danger zone and signpost it for third parties.
- Never remove or disable safety devices on the machine.
- Always wear cut-resistant protective gloves when removing housing parts and when working inside the machine!

⚠ Caution

Danger from hot wash water, washware and machine parts

- Wear protective gloves if necessary.
- Let the washware cool down before emptying, if necessary.
- Let the machine cool down before touching machine parts, if necessary.
- Never open the machine door or hood during a wash cycle.
- Only open and close the hood/door using the designated handle(s).

⚠ Beware

Danger of crushing

Body parts could be crushed when closing hood.

- When the hood starts to move downwards (manually or automatically operated hood), ensure that no body parts are between the hood and objects located underneath.
- Close manually operated hoods using the blue handle.



⚠ Beware

Danger of injury or material damage due to storing items on the hood

Items may fall down when hood moves.

- Ensure that no items are to be found on top of the hood.

Caution

Environmental damage due to improper disposal of liquids

Environmentally hazardous liquids (e.g. grease and oils, hydraulic oils, coolants, cleaning agents containing solvents etc.) may be used during work on and with the machine. Improper disposal of these liquids can damage the environment.

- Always capture, store and transport liquids in suitable containers.
- Never mix liquids.
- Dispose of liquids properly in accordance with local requirements.



9.1 Maintenance



Note

MEIKO recommends having the machine serviced by an authorised service technician at least once a year. As part of the maintenance, an electrical safety inspection is also carried out in accordance with DIN VDE 0701-0702 / DGUV Regulation 3. Wear parts are checked and replaced, if necessary, and the machine tested. Cleaning work and changing pre-filters in machines with GiO MODULE must be carried out by trained operators.

Neglected or improper maintenance increases the residual risk of unforeseen damage to property and persons, for which no liability will be assumed.

A functional test on all safety systems of the machine is carried out during every regular maintenance.

- Comply with the maintenance intervals prescribed in these operating instructions.
- Please note the maintenance instructions for the individual components in these operating instructions.
- Carefully dispose of any detergents that could harm the environment.

9.2 Maintenance table



Note

Maintenance work must **only** be carried out by MEIKO authorised staff!

Maintenance work	U= U 500 M2 H= H 500 M2	Checked	Cleaned	Replaced	Maintenance requirement
Visual inspection					
1. Error memory					
Check error memory for unusual events using M-Commander 2.7	U/H				annually
2. Pumps					
Check pumps for leaks and any visible damage	U/H				annually
Check pumps for pump rotor noise and function	U/H				annually
3. Wash tank, wash and rinse system					
Functional and visual tests of wash and rinse arms	U/H				annually
Replace the ring, nut, bearing and spacer washer on the wash and rinse arms	U/H				annually
Check air trap on tank and clean if necessary	U/H				annually
Check tank level control for leaks	U/H				annually
Check sieves and filters	U/H				annually
Check rack holder/guide for damage	U/H				annually
Check wash and rinse systems for leaks	U/H				annually
Check water level in tank	U/H				annually
Check door seal	U				annually
Check tank and boiler heating	U/H				annually
4. Casing					
Check casing, tank and covers for damage and correct operation	U/H				annually
Check door and door counter balance for correct operation	U				annually

Maintenance work	U= U 500 M2 H= H 500 M2	Checked	Cleaned	Replaced	Maintenance requirement
Visual inspection					
5. Hood and hood counterbalance					
Check hood for ease of movement	H				annually
Check hood handle bearings visually and for correct operation	H				annually
Clean hood guide and back wall seal	H				annually
Check life span of springs <ul style="list-style-type: none"> • Replacement 	H				annually after 650,000 loads or 12 years
6. Fresh water installation					
Check valves, clean dirt trap	U/H				annually
Check boiler level switch is working and not leaking	U/H				annually
Check boiler, hoses, clamps and plastic parts do not leak	U/H				annually
Check boiler drainage system does not leak	U/H				annually
7. Wastewater installation					
Replace flap on ventilation valve	U/H				annually
Check operation of drain pump during drainage	U/H				annually
Check that pumps, hoses are not leaking	U/H				annually
8. Detergent dosing					
Replace peristaltic hose	U/H				annually
Check detergent dosing system is working and not leaking	U/H				annually
9. Rinse aid dosing					
Replace peristaltic hose	U/H				annually
Check rinse aid dosing system is working and not leaking	U/H				annually
10. Test run with function test of whole machine					
Check filling and heating until it is ready for operation	U/H				annually
Visual inspection of the entire machine for leaks	U/H				annually
Carry out test wash and check results	U/H				annually
11. Options					
ActiveClean water softener (if applicable)					
Check water hardness setting	U/H				annually
Check the seal on the lid of the salt container	U/H				annually
Start and check the regeneration process manually	U/H				annually
Integrated reverse osmosis system (if applicable)					
Visually check whole system for leaks	U/H				annually
Prefilter change standard membrane (< 0.1 mg/l)	U/H				every six months
Change pre-filter, chlorine-resistant membrane (≥ 0.1 and ≤ 2.0 mg/l)	U/H				every three months
Check fine sieve insert and choke in concentrate pipeline	U/H				annually
Check correct function of concentrate drain and check for deposits	U/H				annually
Fill in separate log: Certificate of Commissioning, GiO	U/H				annually
Partial demineralisation (PD)/full demineralisation (FD) (if applicable)					
Check operation	U/H				annually
Exhaust air heat recovery (if applicable)					
Check operation of fan	H				annually
Check operation of solenoid valve	H				annually
Carry out visual inspection and check for leaks	H				annually

9.3 Daily cleaning

Caution

Material damage due to water ingress

Electrical cables and electronic components can be damaged if they come into contact with water.




- The dishwashing machine, switch cabinets and other electrical components must **never** be sprayed with a hose or high pressure cleaner.
- Make sure that no water can enter the machine unintentionally.
- If installed at ground level, **never** flood the surrounding room.

Note


Do not use a foaming detergent for dish-washing by hand for pre-cleaning or cleaning the dishwasher. Foam causes malfunctions and results in poor wash results.



The machine is emptied, see chapter "Shutting down the dishwasher" on page 33.

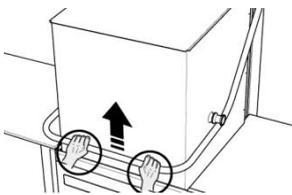

1. Open hood with both hands.

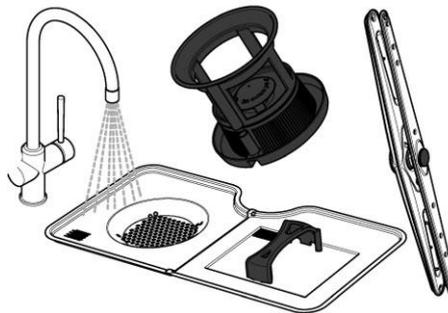

2. Remove tank cover sieve, filter, wash systems top and bottom. All parts to be cleaned are blue or have a blue handle.
3. Remove all food residues sticking to the tank, the tank heater and the filters using a brush.
4. Remove the wash and rinse arms and rinse thoroughly under running water. When doing this, pay particular attention to the nozzles!
5. Clean filter under running water.
6. Reinstall all parts in reverse sequence.

9.4 Cleaning the stainless steel surfaces

Caution

Material damage due to incorrect cleaning

Cleaning of parts made of stainless steel with unsuitable cleaning agents, care products and cleaning utensils leads to damage, deposits or discolourations on the machine.

- Never use aggressive cleaning or scouring agents.
- Never use cleaning agents that contain hydrochloric acid or bleaches based on chlorine.
- Do not use cleaning utensils previously used to clean non-stainless steel.

Caution

Material damage due to aggressive cleaning products

The use of aggressive cleaning and care products near the machine can cause damage to the machine due to their fumes.

- Make sure that the cleaning and care products cannot have direct contact with the machine.
- Do not use aggressive cleaning agents (e.g. aggressive tile cleaner) to clean the surrounding area.
- Please observe the notes on the product packaging.
- In case of uncertainty, request information from the suppliers of these products.

We recommend that, when required, the stainless steel surfaces are cleaned exclusively using cleaning and care products that are suitable for stainless steel.

- Lightly soiled parts can be cleaned with a soft and possibly damp cloth or sponge. For moistening we recommend only using demineralised water.
- In order to prevent limescale, we recommend wiping the surfaces thoroughly dry after cleaning.

9.5 Descaling



Warning

Danger of injury from contact with acids

Descaling agents can cause damage to health if they come into contact with skin or eyes or are swallowed.

- Use eye protection.
- Wear protective gloves.
- Contact a physician immediately if chemicals or water containing chemicals (rinse water) are swallowed.
- Please take note of the manufacturer's safety instructions.

Caution

Destruction of plastic parts and seals from residues of de-scaling agent

Completely flush the de-scaling agent out of the dishwasher.

Operating the machine using hard water can result in the build up of lime scale deposits in the boiler and the tank interior. If this occurs, it is necessary to de-scale the tank interior, boiler housing, tank heating, boiler heating and the washing and rinse systems.

Notes on conducting de-scaling:

- For de-scaling, only use products suitable for industrial dishwashers. Observe the manufacturer's instructions!
- Completely flush the de-scaling agent out of the dishwasher. To do so, perform 1–2 wash cycles with fresh water.
- Possibly assign Customer Service the task of de-scaling the boiler.

9.6 Spare parts

Please provide the following information on any query and/or when ordering spare parts:

Type:
SN:


(This information can be found on the type plate, see page 15.)

10 Non-use for several days

10.1 Break in operation (e.g. seasonal operation)

- Run self-cleaning programme and clean the machine, see page 33.
- Close the on-site shut-off valve.
- Switch off on-site mains isolator.
- Manually open a gap in the front door or hood to prevent germ formation and odours.
- Frost protection: If necessary, have the machine frost-proofed by the authorised service technician. Dishwashing machines of the M-iClean U series without GiO MODULE can be frost-proofed by yourself.

10.2 Commissioning after break in operation

- Set up the machine for 24 h at 25°C if it is not frost-free. Have an authorised service technician commission the machine again.
- Have reverse osmosis (GiO MODULE) (option) disinfected in the case of down-times of more than 6 months.
- Open the on-site shut-off valve and switch on the main switch.
- Put machine into operation, see page 27.

11 Dismantling and disposal

In addition to valuable raw materials and recyclable materials, the packaging and the old appliance may also contain substances that are harmful to health and the environment and were required for the function and safety of the old appliance.

11.1 Disposal of packaging materials

All the packaging materials are recyclable. The following materials are used:

- Square timber frame
- Plastic sheeting (PE film)
- Cardboard packaging (for protecting edges)
- Packaging strap (steel strip)
- Packaging strap (plastic (PP))



Note

The square timber frame consists of untreated raw pine / spruce. In order to guard against pests, country-specific import regulations may also stipulate the use of treated wood.

11.2 Dismantling and disposal of the old device

Warning



Risk of injury from contact with chemicals

- Observe the safety data sheets and dosing recommendations of the chemical manufacturers.
- Use eye protection.
- Wear protective gloves.
- Do not mix different chemical products.

- Where appropriate, rinse machine components, containers, dosing units and hoses with fresh water to remove chemical residues. Wear suitable clothes (gloves, safety glasses) for this.



The device is marked with this symbol. Please observe the local regulations for proper disposal of your old device.

The components should be separated by material for recycling.

12 Abbreviations

Abbreviation	Meaning
GiO	GiO module, integrated reverse-osmosis system
pH	The pH value denotes the acidity of liquids
LpA	LpA denotes the emission sound pressure levels at the workplace
dB	Decibel, unit of sound pressure level.

13 Index

A

A0 control.....	18
Abbreviations	51
ActiveClean.....	17
AirConcept.....	18
Assembly	20
Authorisation level	
Dosing technology	41
Service	41

B

Blue operating concept.....	15
-----------------------------	----

C

Change authorisation level	41, 42, 43
Change of products	17
Changing water.....	36
Checking the condition at delivery	20
Cleaning	
descaling	49
sieve cover	14
suction strainer	14
wash arm	14
Cleaning the stainless steel surfaces	48
Commissioning	25
prerequisites.....	25

D

Daily cleaning	33, 48
Delivery contents	4
Descaling	49
Designation of machine type	4
Detergent	16
Detergent and rinse aid	16, 34
Dismantling	51
Dismantling and disposal.....	24, 50
Disposal of packaging materials	51
Disposal of the old device.....	51
Dosing	
manual.....	29
Dosing equipment.....	16
Dosing system level.....	16, 44

E

EC/EU declaration of conformity	20
Electrical connection	
protective equipotential bonding	23
Exhaust heat recovery	18

F

Feet.....	14
Fill consumables	28, 34
Fill salt container	35
Functional description.....	13
Fundamental safety and accident prevention regulations	11

G

GiO MODULE	15
------------------	----

H

Hood	14
------------	----

I

Intended use	10
--------------------	----

L

Liability and warranty	5
------------------------------	---

M

Maintenance	46
Maintenance and cleaning	44
Maintenance table.....	46
Malfunctions.....	37
Membrane key pad	26
Messages.....	38

N

Noise emission.....	20
Non-use for several days.....	50
Notes in the instructions	6
Notes on the operating instructions	4

O

Operation/use	26
Options	
ActiveClean	17
AirConcept	18
Thermal disinfection	18
Overview illustration.....	14
exterior view	14
interior view.....	14

P

Parameters	
view.....	42
Partial desalination cartridge	43
Perform assembly	24
Perform commissioning	25
Prerequisites for assembly	20

Product description	13	Suction lances.....	17
Programme		Switching off.....	33, 48
configuration	30	Symbol explanation.....	6
Programme table	31	T	
R		Technical data.....	19
Rack guide	14	Thermal disinfection.....	18, 19
Regeneration	36	Thermolabel disinfection	19
Related documents.....	4	Transport.....	23
replace canister	34	U	
Requirements for the fresh water connection.....	21	Unintended use.....	10
Requirements for the installation area	20	V	
Requirements for the personnel	8	Ventilating the pipes	28, 43
Requirements for the waste water connection	21	W	
Requirements to the electrical connection.....	22	Wash arm.....	14
Residual risks	9	Wash programme	31
Rinse aid.....	16	Washing	
S		emptying the washware	33
Safety.....	6	Preparation	27
Safety symbols in the instructions	7	putting in washware	29
Service codes	41	putting the machine into operation.....	27, 35
Service level	42	Select wash programme	30, 32
Shutting down the dishwashing machine	33, 48	Start wash cycle	32
Spare parts	50	Water softener	17
Start regeneration manually	43	What to do in the event of an emergency	13



The clean solution



MEIKO Maschinenbau GmbH & Co. KG

Englerstraße 3

77652 Offenburg

Germany

www.meiko-global.com

info@meiko-global.com